


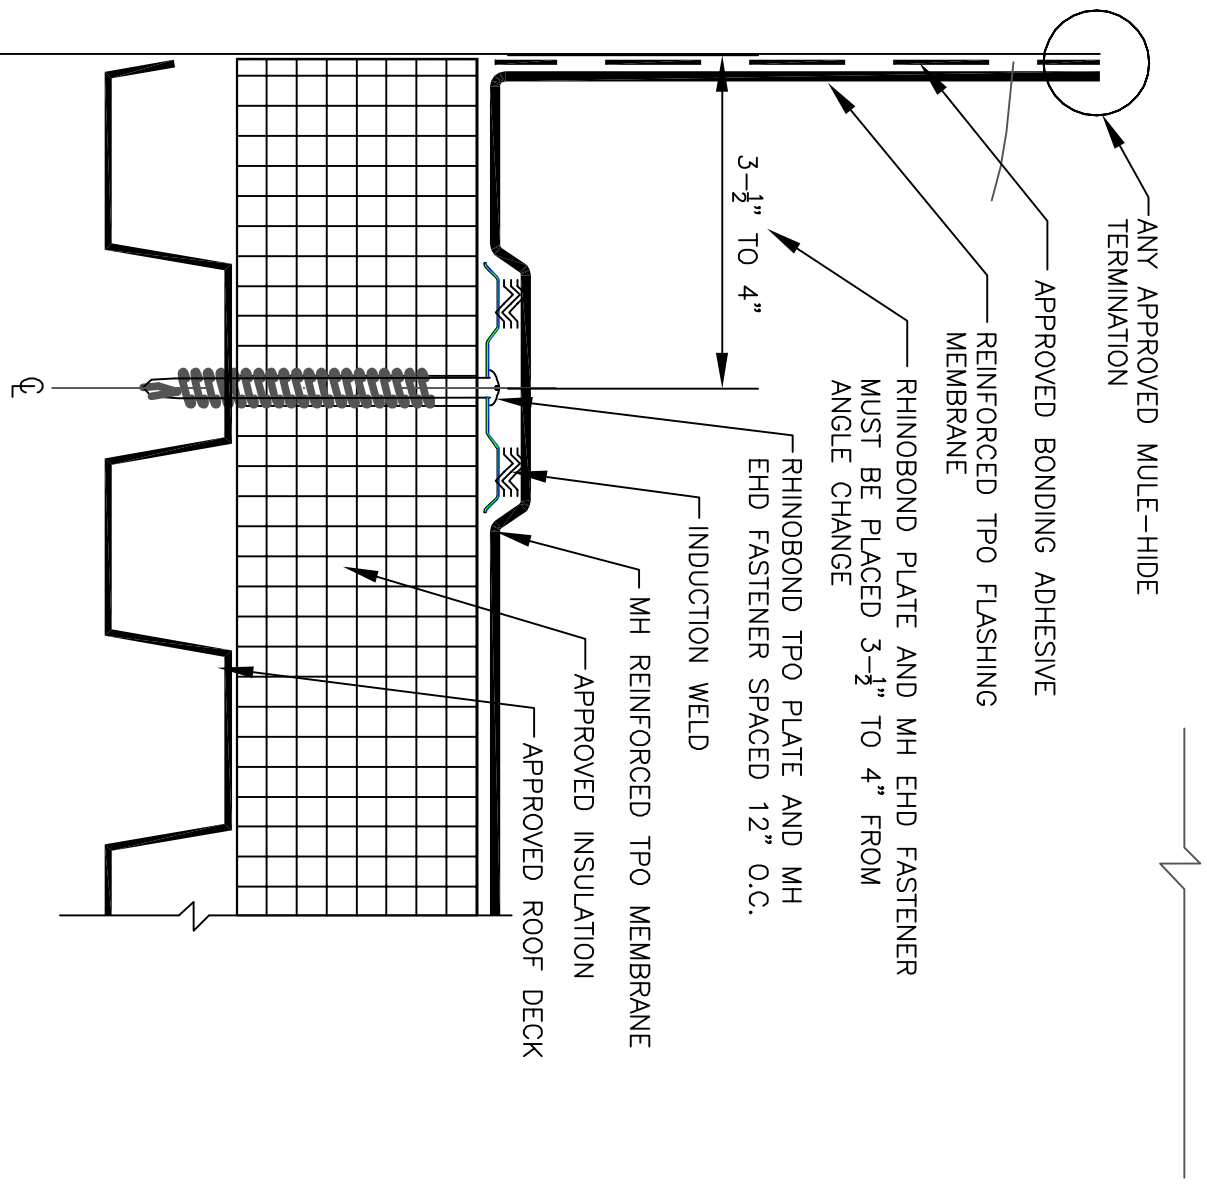

NOTES:

1. POSITION RHINO-BOND PLATES 3-1/2" TO 4" FROM ANGLE CHANGE.
2. FLASHING MEMBRANE REQUIRES BONDING ADHESIVE.
3. MULE-HIDE EHD FASTENERS AND RHINO-BOND TPO PLATES ARE REQUIRED OVER STEEL AND WOOD DECKS.
4. THIS METHOD OF MEMBRANE ATTACHMENT IS NOT FOR USE WITH NON-FACED EXPANDED POLYSTYRENE (EPS) OR EXTRUDED POLYSTYRENE (XPS) INSULATION.
5. THE USE OF 6" OR 10" PS RUSS IS NOT APPROVED WITH THIS METHOD OF ATTACHMENT.

**MULE-HIDE  
PRODUCTS CO., INC.**

**RHINO-BOND  
BASE ATTACHMENT  
SYSTEMS:  
TPO  
MECHANICALLY ATTACHED**

**DETAIL NO.:  
MHT-RB2  
REVISION DATE: 01/2013**